

TOCA - FUSE REPLACEMENT

TOC 1. Unstow
Supply Fuse (one)
Kit

TOC 2. ✓ TOCA Power switch - Off
Front
Panel

3. Locate fuse location on TOCA front panel.
Turn black knob ↺ to unscrew.

4. Change out fuse.

5. Screw black turn knob ↻ to screw back in.

TOC 6. TOCA Power switch → On
Front
Panel

7. ✓ Display power on
If no power, go to TOC Cue Cards.